



Oasis 4 Shelter

Model No. KC074-815

FIRE SAFETY WARNING


1. KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC!
2. Never place your stove, campfire, heater or other flame source in or near your shelter.
3. Never cook, light or refuel a stove or other heat source in or near your shelter. Do not operate gas appliances in your shelter.
4. Do not hang lights or heating devices near the walls of your shelter.
5. Maintain adequate ventilation inside your shelter at all times.
6. Familiarise yourself with the fire safety rules and regulations of the grounds where you are camping.
7. Keep children away from all heat and fire sources.
8. Do not store flammable liquids inside your shelter.
9. Do not smoke in your shelter.
10. Extinguish or turn off all appliances, fires and heat sources before going to sleep.
11. Never use aerosols or insect repellent sprays in or around the fabric of your shelter. It can damage the water proofing and is not covered by our warranty.

Your shelter includes:

- 21 x pegs
- 8 x ropes
- 4 x black STEEL poles (6500mm x 19mm)
- 4 x black STEEL poles (2280mm x 19mm)
- 1 x centre hub (connector)
- 4 x pad feet


PITCHING INSTRUCTIONS

1. Select a dry, level site and clear the ground of any sharp objects. Remove the shelter from its carry bag, untie fabric ties and unroll the shelter.
2. Assemble the peak connector poles.
3. Insert the ends of the peak connector poles into the centre hub.

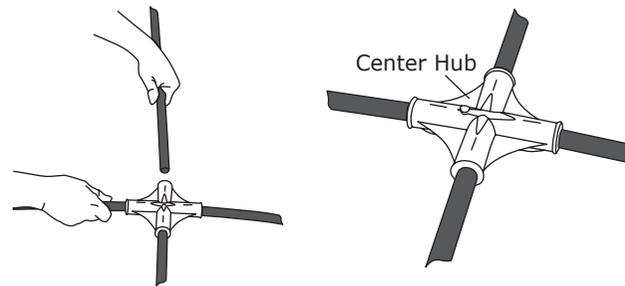



4. Partially assemble the four leg poles with ridge hub.

Note: Do not assemble the last pole on each side of the ridge hub at this time.

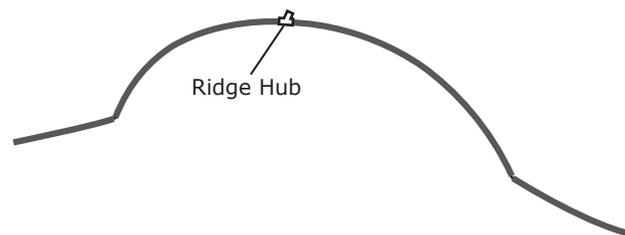


5. Insert end of peak connector pole into the ridge hub. Repeat for the remaining three leg poles with ridge hub.


Note: Make sure metal pin locks into slot on top of ridge hub, you may have to twist peak connector from side to side.

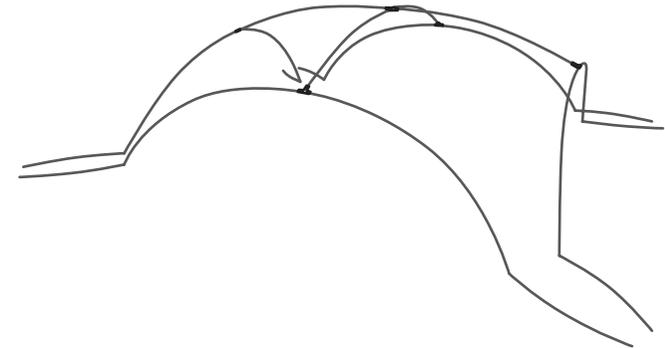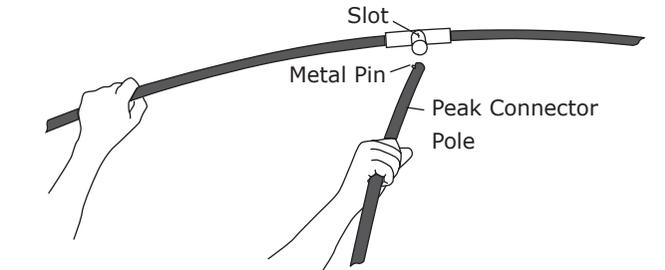

6. Unfold canopy and pull over frame. Fold back one flap on canopy to allow easy access to inside of shelter frame and underside of canopy.

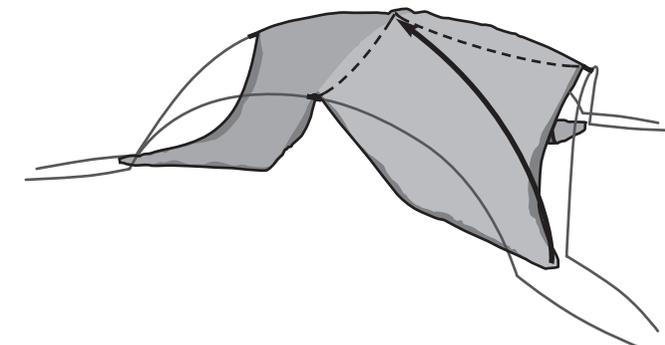


7. Locate the hook and loop fasteners closest to the centre of the underside of the canopy and wrap around poles to secure tightly.

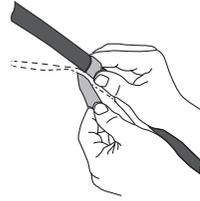


Complete last part of leg pole assembly to erect frame.


8. Position pad feet at the four corners. Unroll the webbing straps from the corners and connect them to the side release buckles on the corresponding corner. This stops the corners from 'splaying' out when the steel poles are inserted.

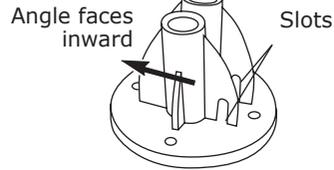

Note: Pad feet must angle toward centre of shelter with vertical slots facing outward. Webbing tape to be on outside of pad feet.

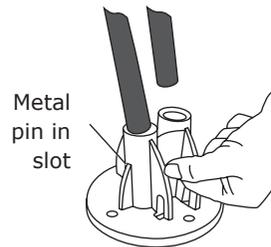


9. Insert ends of poles into pad feet and twist until metal pin locks into slot. Repeat for other three pad feet locations. Adjust to form square webbing tape to be firm

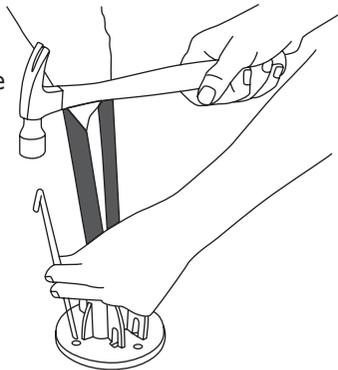


10. Drive pegs through holes in pad feet to secure BEFORE proceeding to Step 13.

Note: Two pegs are provided per pad foot. Additional pegs may be required, depending on soil type.


11. Attach hook end of canopy tension strap to square slot on the pad feet. Repeat for the remaining three pad feet. Pull down strap, at each corner to tighten.

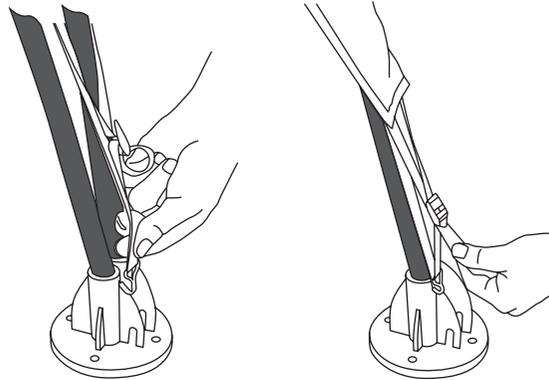


12. Wrap web straps around pole at all four corners and close snap-in buckles. Pull strap to tighten.

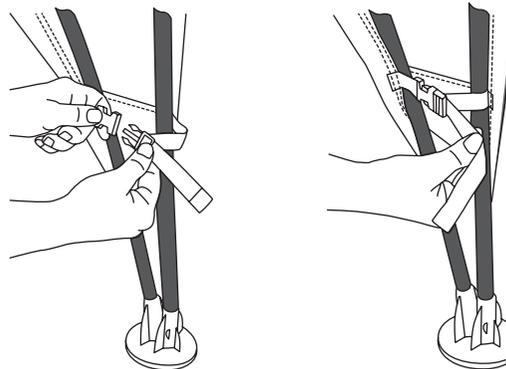

13. Attach guy ropes to web loops located on outside seams of canopy then secure with pegs.

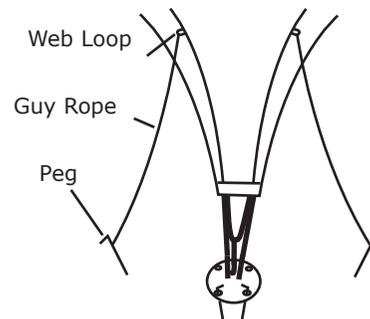

14. Fine tune the canopy so it remains taut and positioned correctly over the frame.

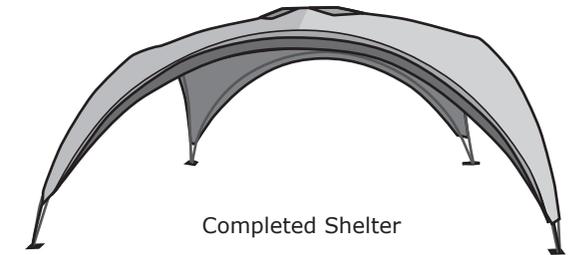

15. If required, attach the optional solid wall to chosen side of the shelter.



REVERSE THE PROCEDURE TO LOWER THE SHELTER.

PACKING INSTRUCTIONS

Pack the poles and pegs into their bags. Fold the shelter from each side to the centre and in half again. Adjust to the length of the poles. Place the poles onto the floor and roll them inside so that the floor is on the outside. Store and pack the shelter in its bag.

SHELTER CARE INSTRUCTIONS

PLEASE READ ALL OF THE SHELTER CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS SHELTER BEFORE USING YOUR SHELTER FOR THE FIRST TIME.

1. Before you use your new shelter, fully unpack and pitch it at home. It is important to familiarise yourself with the set up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry, will drain well if it rains and is protected from wind and other elements.
3. Keep clear of overhead power lines and trees when setting up your shelter.
4. For best and easiest results, enlist the help of at least one other person to assist in pitching the shelter.
5. Keep all flame and heat sources away from this shelter fabric. Do not use open flame or gas appliances in or near your shelter.
6. Do not use aerosol sprays or any solvent based products in or around your shelter as these could damage the fabric or special coatings. These products include but are not limited to: repellent spray, hair sprays, alcohol, detergents, fly spray, petrol, kerosene etc.
7. Please note, the warranty on this shelter will be deemed void if the product is used for any purpose other than a temporary, recreational use shelter.
8. Especially in windy conditions, it is essential that you attach guy ropes and fasten them to the ground. We suggest you insert the pegs into the ground at a 45° angle towards the shelter, not straight down. Please note, your shelter will not be covered under warranty if wind damage occurs.
9. Use all of the guy ropes and pegs included to ensure your shelter is secure and to prevent damage to both yourself and the shelter. Check guy ropes/pegs daily.
10. To clean your shelter, only ever use a soft sponge and warm water. DO NOT use excess force or other harsh cleaners to remove marks from shelter.
11. Ensure the shelter is completely dry and clean before storing away and ensure to store it in a dry environment.

IMPORTANT:

1. Under certain conditions (cold weather, high humidity etc.) condensation may form on the inside of your shelter. Condensation can occur for many reasons including vapour from your breath, perspiration, cooking nearby or wet clothing inside your shelter. This does NOT mean your shelter is leaking through the fabric. You can minimise condensation by airing out your shelter during the day and by removing any wet clothing/towels etc.
2. Try to avoid pitching your shelter under trees as tree limbs, falling leaves, sap, bird droppings or excess water dripping from the trees can cause damage to the shelter fabric and its special coatings resulting in leakage or discolouration.
3. Only remove the shelter pegs by pulling on the peg itself. NEVER pull on the shelter or the webbing loops to remove pegs as it could result in damage to the shelter or personal injury.
4. DO NOT leave shelter pitched for weeks at a time as extended exposure to the sun's ultraviolet rays can damage and/or cause it to discolour. Your shelter will not be covered under warranty if you leave it up for many weeks at a time.
5. STORAGE:
NEVER store your shelter wet or dirty (even for short periods of time).
NEVER store your pegs or poles inside your shelter. Always use the separate bags they are supplied in.
6. You may want to insure your shelter against loss or damage.

WARRANTY INFORMATION

The warranty period for this shelter is found on the packaging and full details are on the Kiwi Camping website - www.kiwicamping.co.nz.

Key points:

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this product will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside it's warranty period, we can repair the product at a nominal cost.



Distributed by: Aber, Hamilton, NZ

www.kiwicamping.co.nz

5199-04/20