

kiwi camping® Kereru Fly's

PITCHING INSTRUCTIONS

Model No. KC072-119 (Green) KC072-415 (Orange) (3m)

Your fly includes:

14 x pegs
10 x ropes

Model No. KC072-120 (Green) KC072-416 (Orange) (6m)

Your fly includes:

20 x pegs
12 x ropes

1. Select a dry, level site and clear the ground of any sharp objects. Remove the fly from its carry bag, untie fabric ties and unroll. Save the fabric ties to make packing away the fly easier.
2. You can either use poles (not provided) to pitch your fly or suspend it between two trees. Tie a guy rope to the middle webbing loop at each end, tie one end around a tree or hanging branch and secure. Tie the other end to another tree or limb and tighten to suit.
3. You can either peg down the corners or suspend these also from a tree or poles depending on what your requirements are.



To make sure the fly stays in place, insert the pegs into the ground at a 45° angle.

4. Only tie ropes to the webbing loops not to any shock-corded peg loops.
5. Any damage caused by bird droppings, tree sap or falling branches is not covered by warranty.

PACKING INSTRUCTIONS

Pack the pegs into their bag.
Evenly lay out the outer fly and fold to suit the bag size.

CARE INSTRUCTIONS

PLEASE READ ALL OF THE CARE INFORMATION AND INSTRUCTIONS INCLUDED WITH THIS PRODUCT BEFORE USING YOUR TENT FOR THE FIRST TIME.

1. Before you use your new fly, fully unpack and pitch it at home. It is important to familiarise yourself with the set up procedure and the various features.
2. Select a site that is level, clear of any sharp objects, is dry, will drain well if it rains and is protected from wind and other elements.
3. Keep all flame and heat sources away from this tent fabric. Do not use open flame or gas appliances in or near your tent.
4. Do not use aerosol sprays or any solvent based products in or around your fly as these could damage the fabric or special coatings. These products include but are not limited to: repellent spray, hair sprays, alcohol, detergents, fly spray, petrol, kerosene etc.
5. Please note, the warranty on this fly will be deemed void if the product is used for any purpose other than a **temporary, recreational** use shelter.
6. We suggest you insert the pegs into the ground at a 45° angle towards the tent, not straight down.
7. Use all of the guy ropes and pegs included to ensure your fly is secure and to prevent damage to both yourself and the fly. Check guy ropes/pegs daily.
8. To clean your fly, only ever use a soft sponge and warm water. DO NOT use excess force or other harsh cleaners to remove marks from tent.
9. Ensure the fly is completely dry and clean before storing away and ensure to store it in a dry environment.

IMPORTANT:

1. Tree limbs, falling leaves, sap, bird droppings or excess water dripping from the trees can cause damage to the fly fabric and its special coatings resulting in leakage or discolouration.
2. Only remove the pegs by pulling on the peg itself. NEVER pull on the fly or the webbing loops to remove pegs as it could result in damage to the fly or personal injury.
3. DO NOT leave fly pitched for weeks at a time as extended exposure to the sun's ultraviolet rays can damage and/or cause it to discolour. Your tent will not be covered under warranty if you leave it up for many weeks at a time.
4. STORAGE:
NEVER store your fly wet or dirty (even for short periods of time). NEVER store your pegs or poles inside your fly. Always use the separate bags they are supplied in.
5. You may want to insure your fly against loss or damage.

WARRANTY INFORMATION

The warranty period for this tent is found on the packaging and full details are on the Kiwi Camping website - www.kiwicamping.co.nz

Key points:

The original purchaser of this product is offered a warranty if during this time period the product fails due to a fault in either materials or workmanship. Service under this warranty is available by returning the product, with your proof of purchase, to where it was purchased. If after inspection it is determined that the product is defective, we will repair or replace it (at our discretion) free of charge. This warranty does not cover misuse, damage caused by accident, storm or wind damage, mildew, neglect, UV degradation and fair wear and tear. Please note, the warranty on this tent will be deemed void if the product is used for any purpose other than a temporary shelter. If the claim is not deemed a warranty or is outside it's warranty period, we can repair the product at a nominal cost.



Distributed by: Aber, Hamilton, NZ
www.kiwicamping.co.nz

4662-01/17